
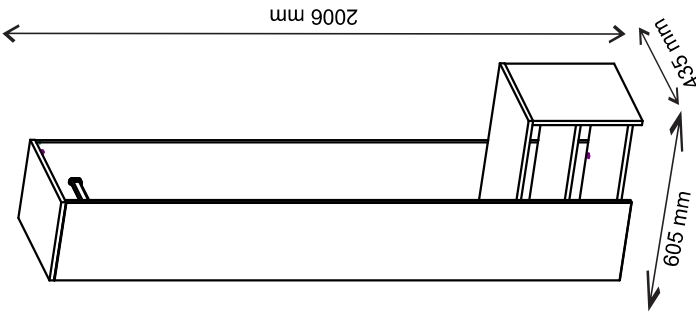
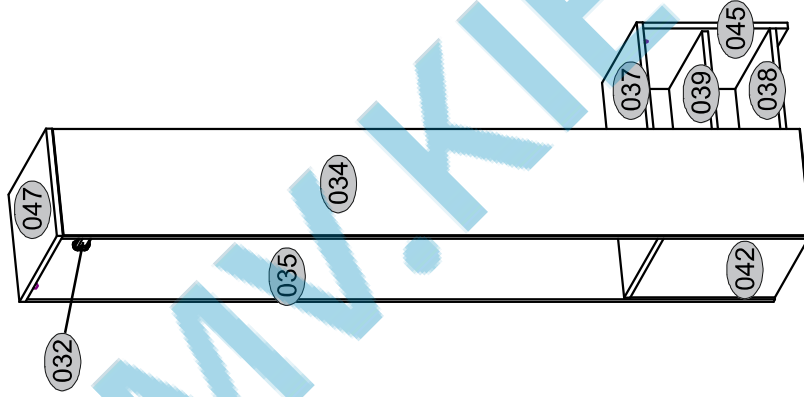
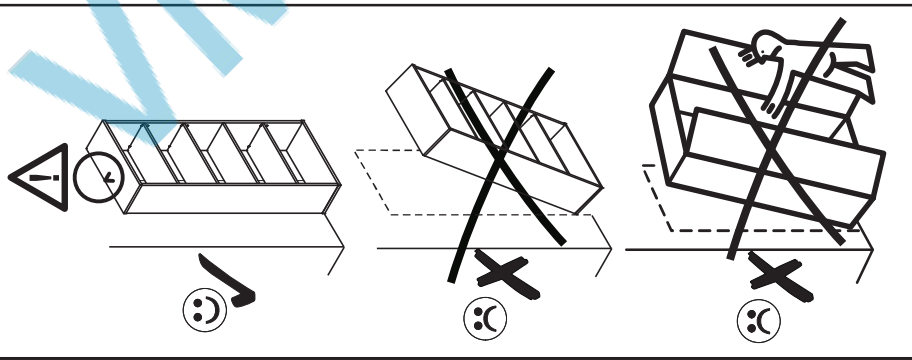
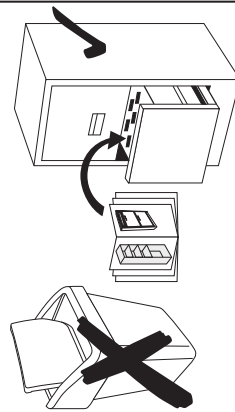
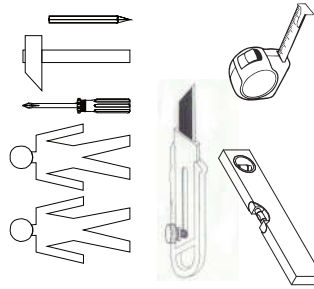
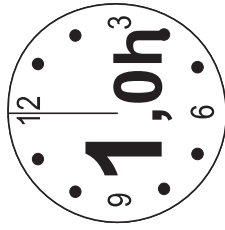


Installation manual

RUTA: high hanger

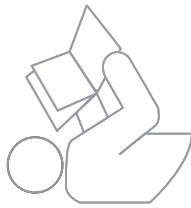


Code	Dimensions				Package
	1984	300	16	1	
034	1984	300	16	1	3/3
035	1984	300	16	1	3/3
037	600	400	16	1	2/3
038	566	400	16	1	2/3
039	566	380	16	1	2/3
042	384	400	16	1	2/3
045	384	400	16	1	2/3
047	300	434	16	1	2/3
032	395			1	1/3


1x p17 φ5x60 mm	1x n14 φ5x12mm /16	24x f1 φ8x30 mm	1x z1	4 x d1 φ5x17 mm
6x f3 φ10 mm	20x r1 φ5x12mm /16	20x s2	6x p25 φ3.5x16 mm	2x n301
1x φ10 mm	20x r16			




1

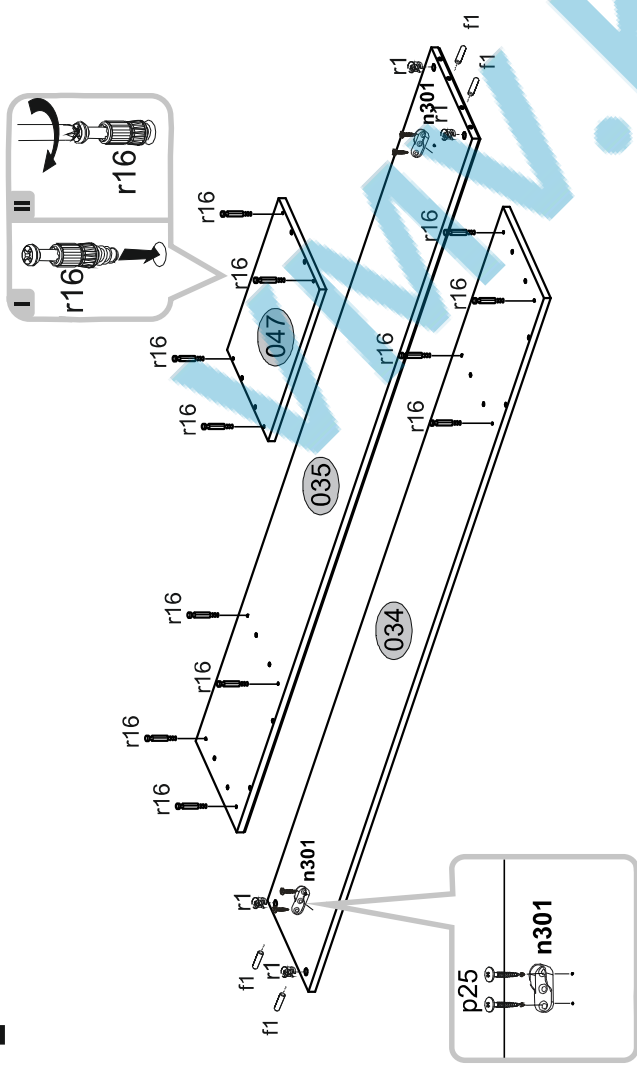


3

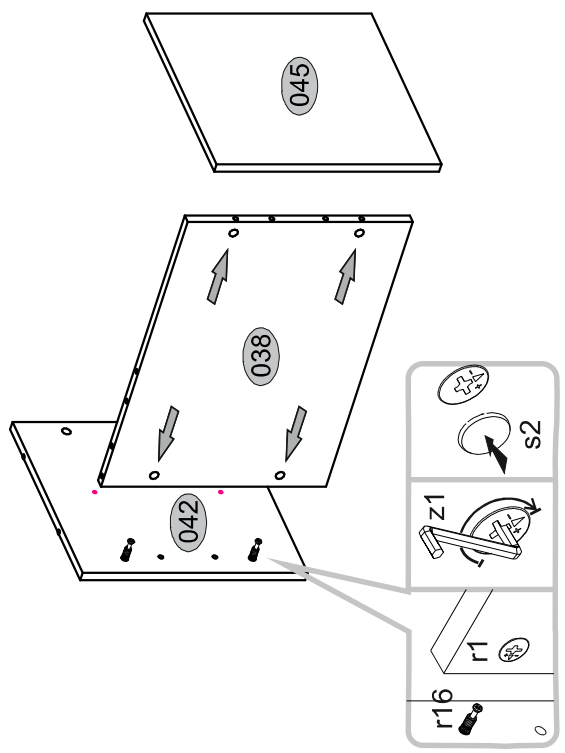


2

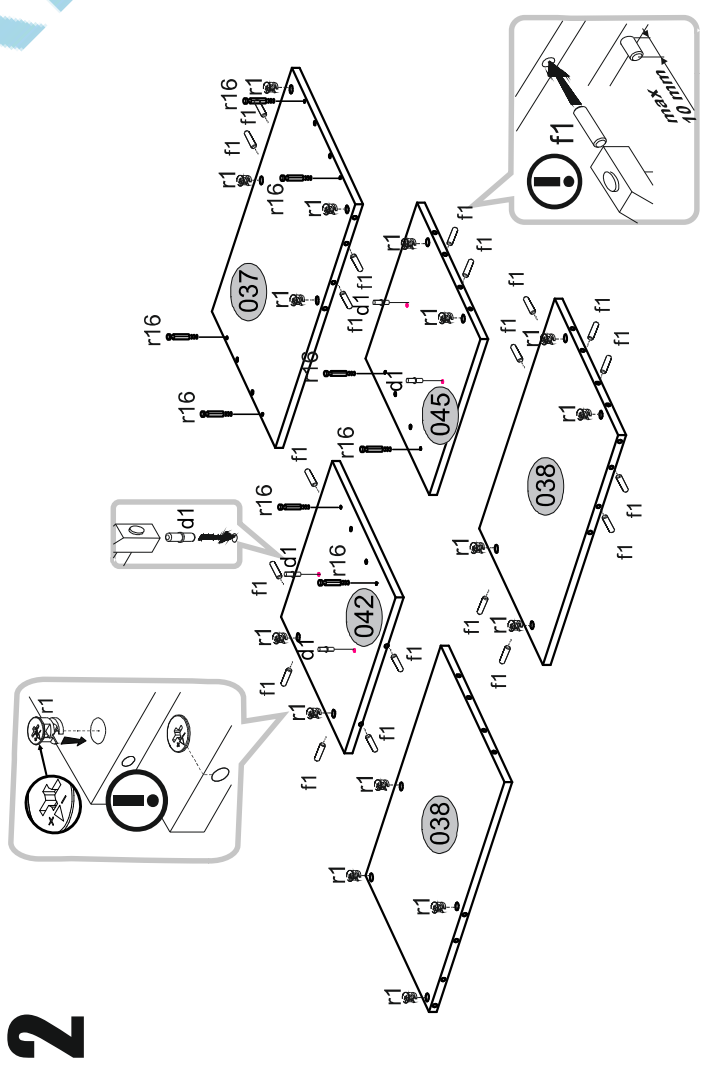



4

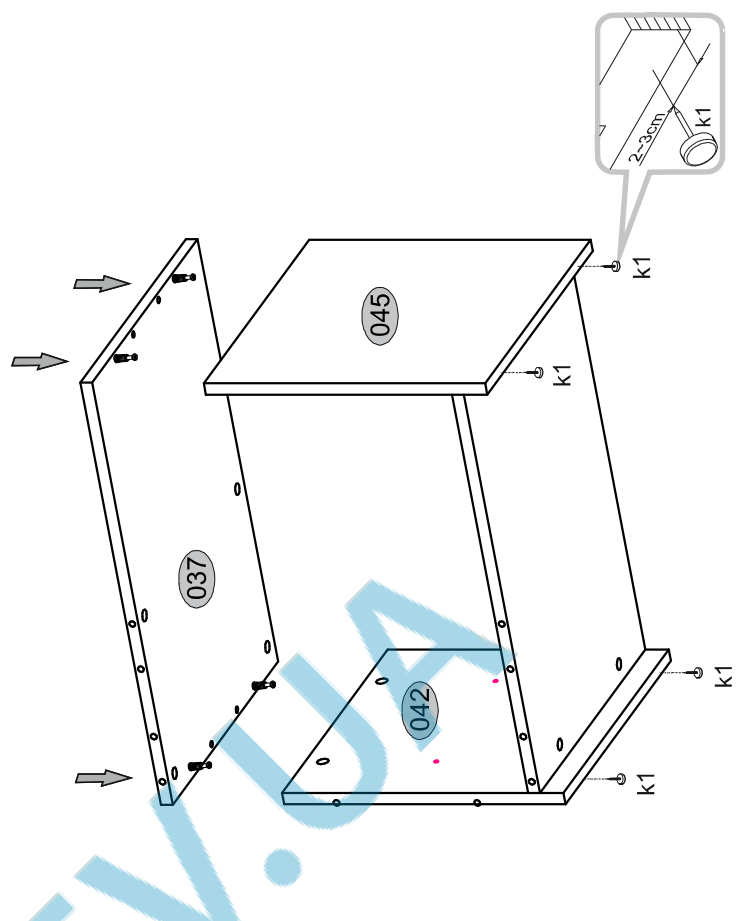

5








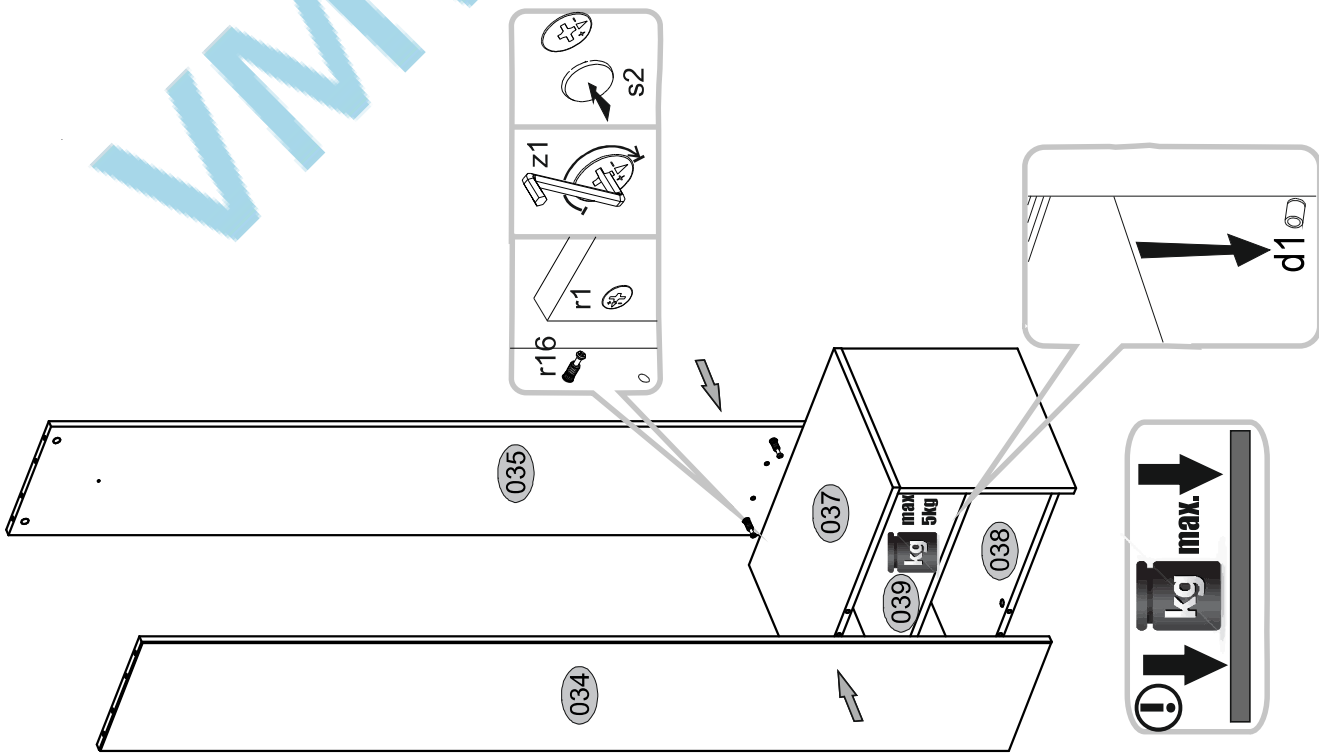


6

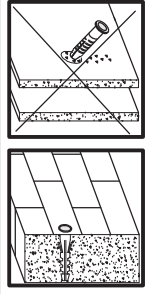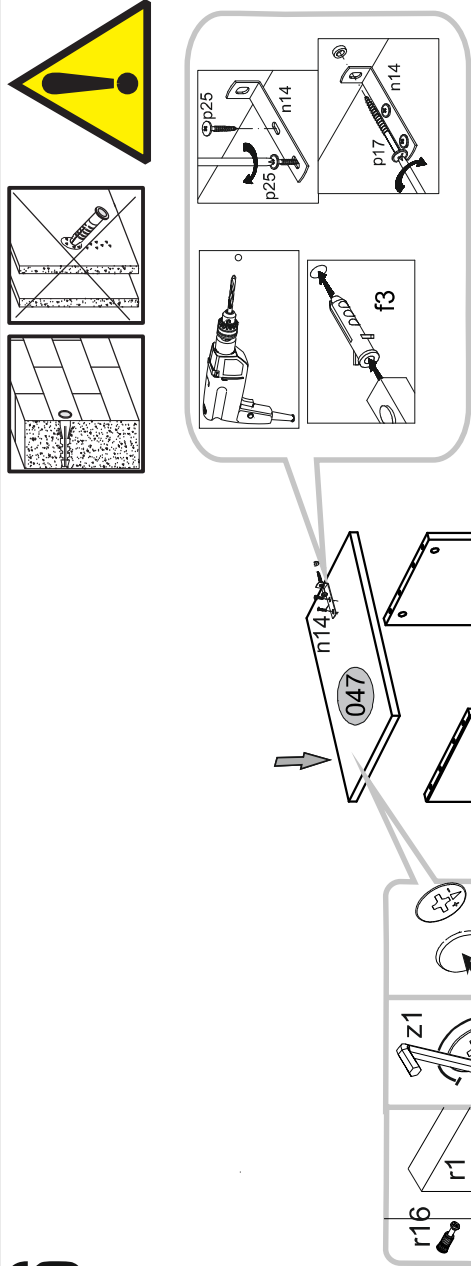


Installation manual

RUTA: chest

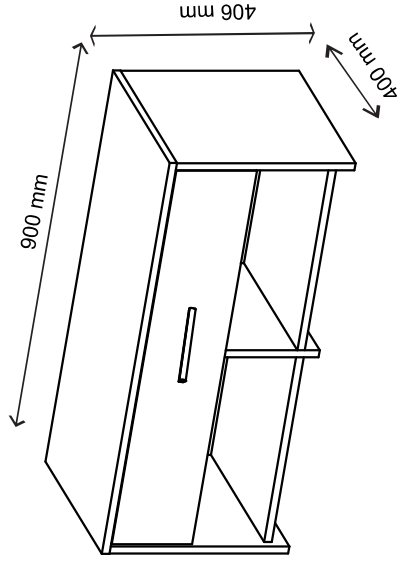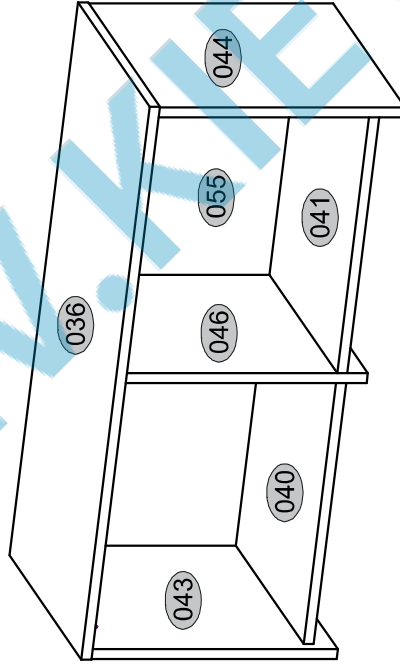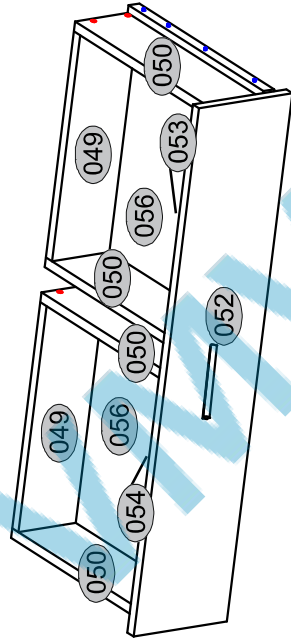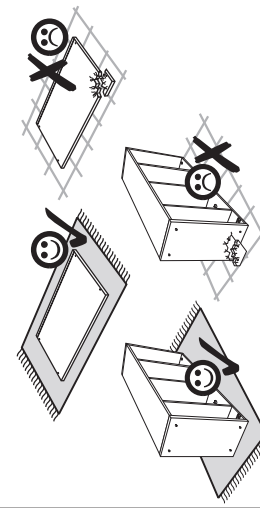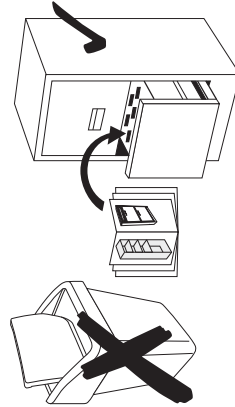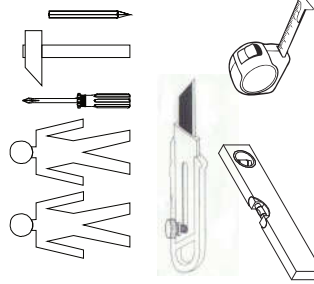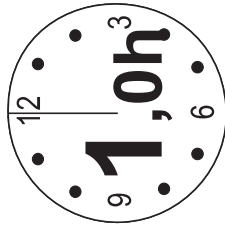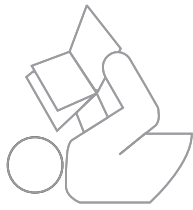


Code	Dimensions			Package
	900	400	16	
036	900	400	16	2/3
040	425	377	16	1/3
041	425	377	16	1/3
043	384	400	16	2/3
044	384	400	16	2/3
046	384	377	16	1/3
049	368	120	16	2
050	350	120	16	2
052	860	173	16	1/3
053	368	120	16	1
054	368	120	16	1
055	361	885	3	1
056	388	338	3	2


4x		4x30mm	p21	1x		c235	1x		s1	16x		e1	16x		f1	22x		p25	24x		r16	14x		r1	14x		s2
6x		k1	2x		p10	2x		i1	30x		l1	14x		#16	14x		r16	14x		s2	14x		r16	14x		s2	




1

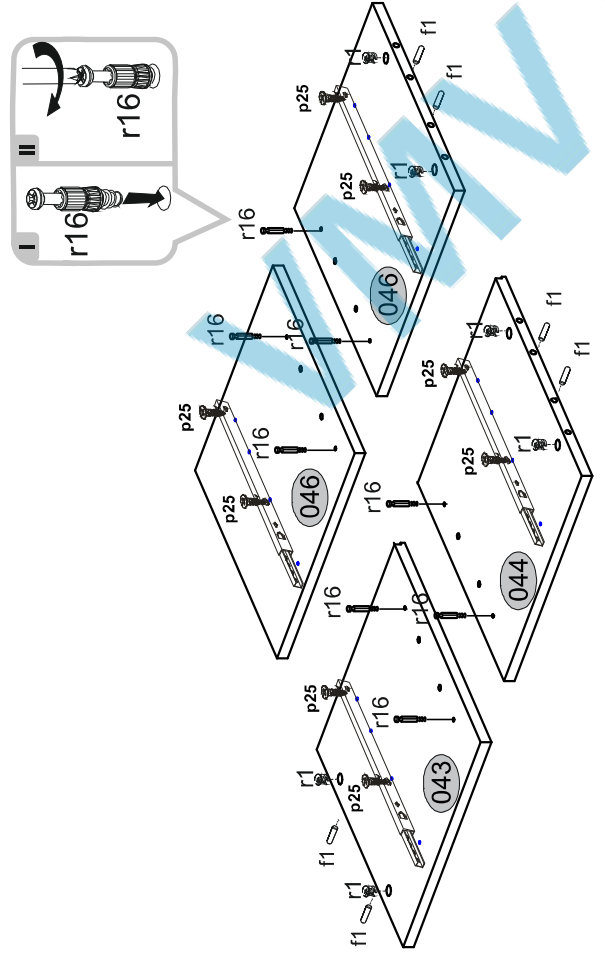


3

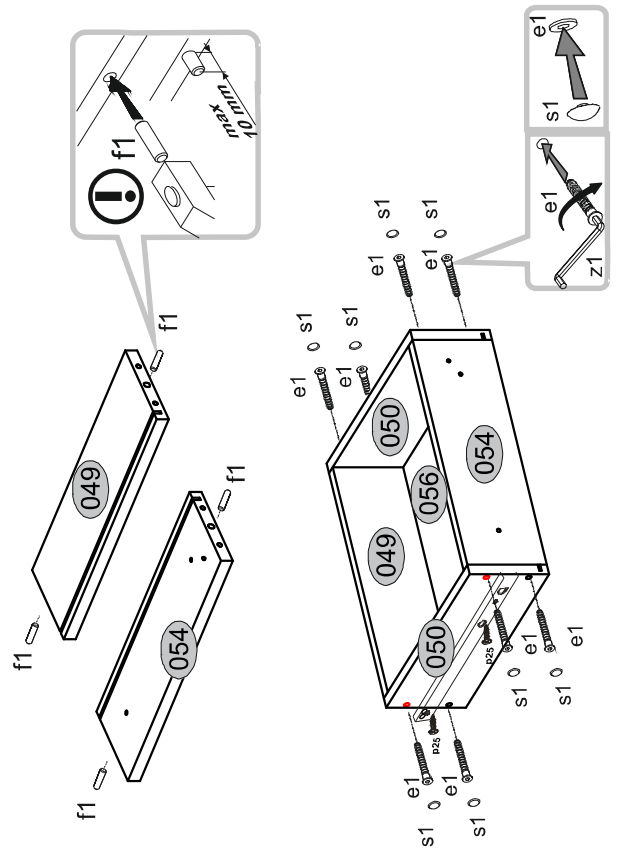

2

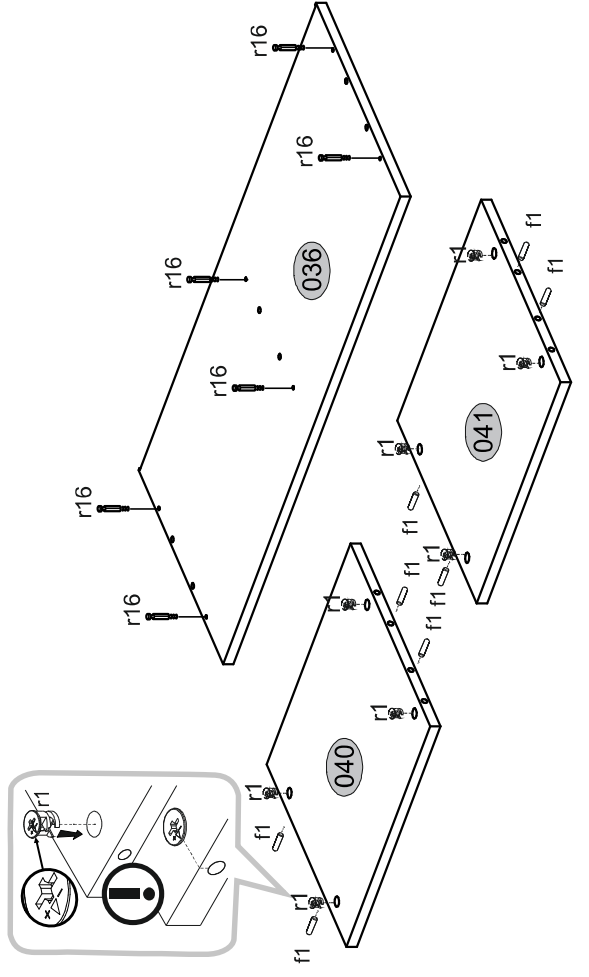


4

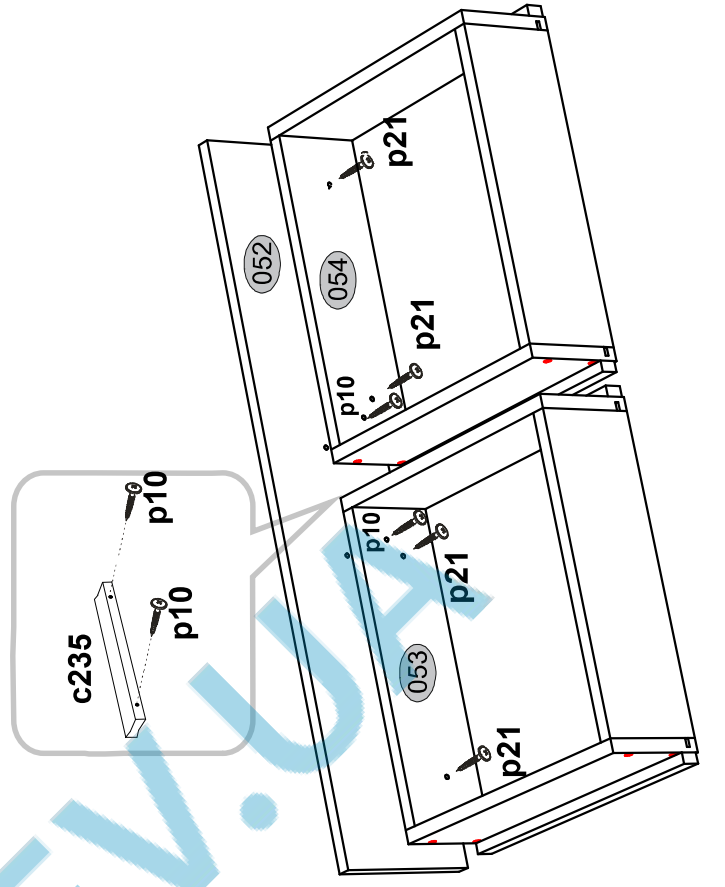






$a=b$


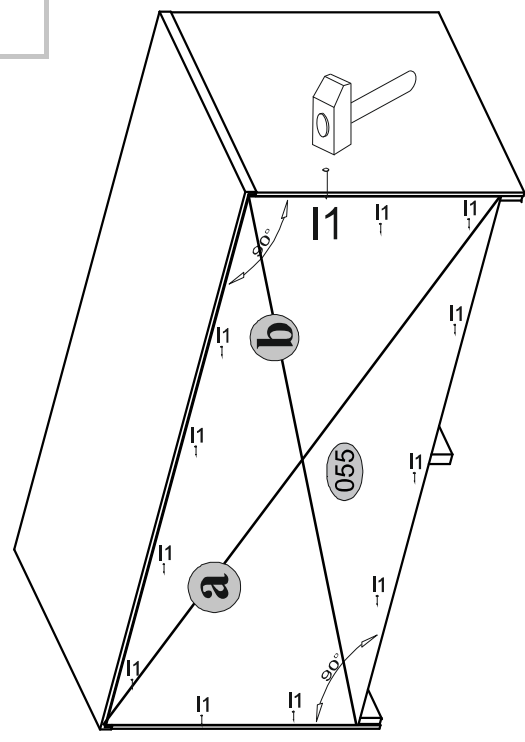


7

8

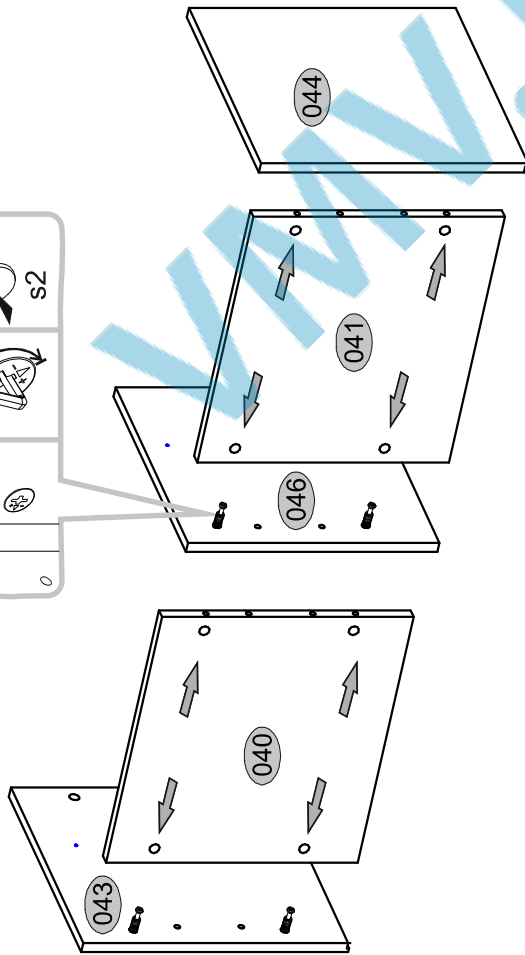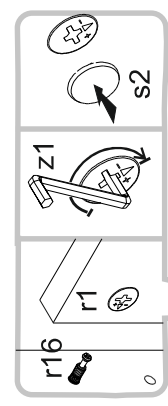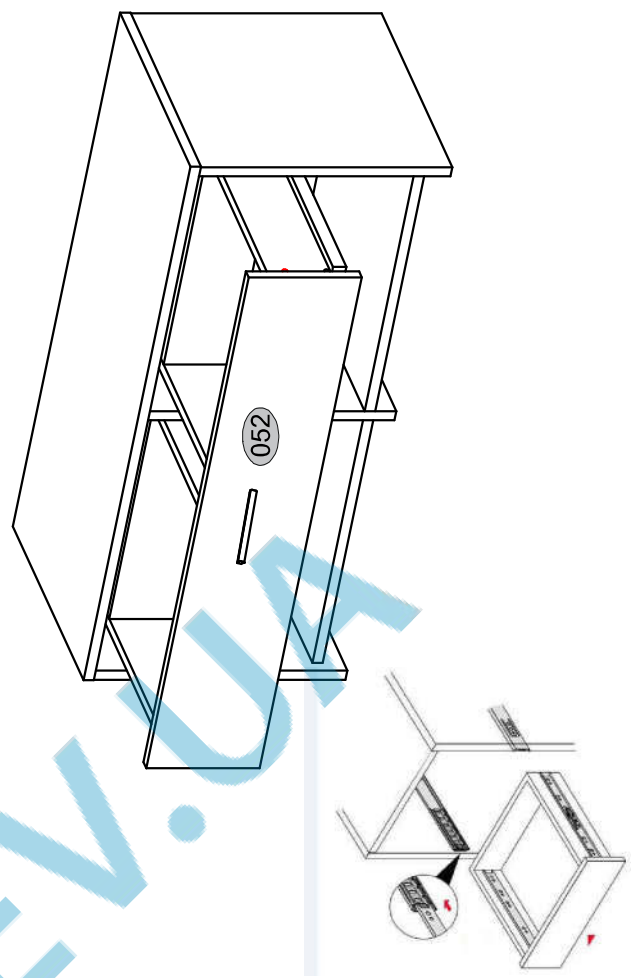







5

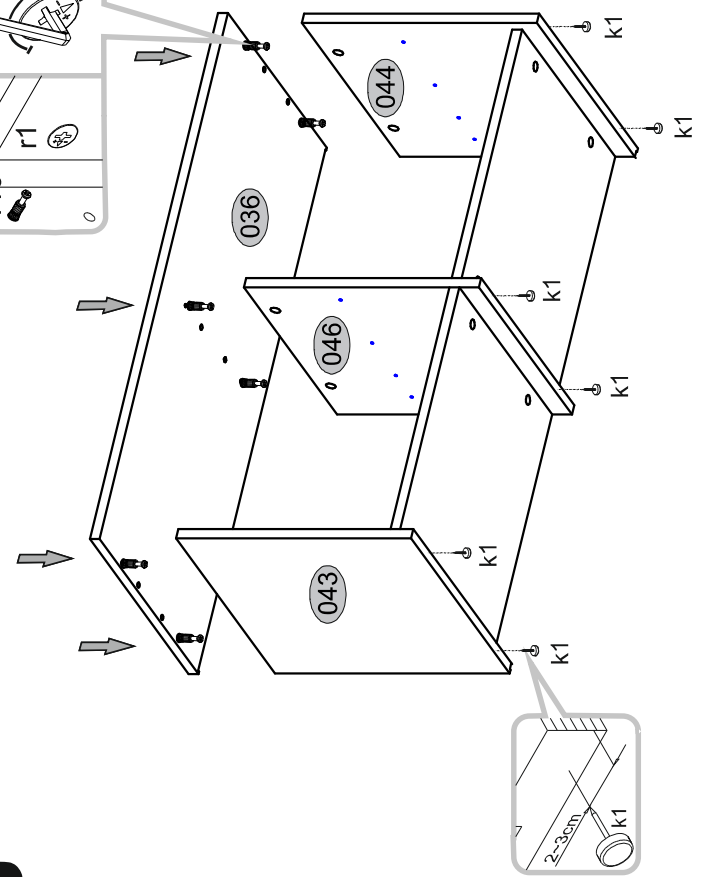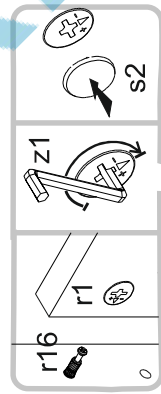

6


Installation manual

RUTA: hanger

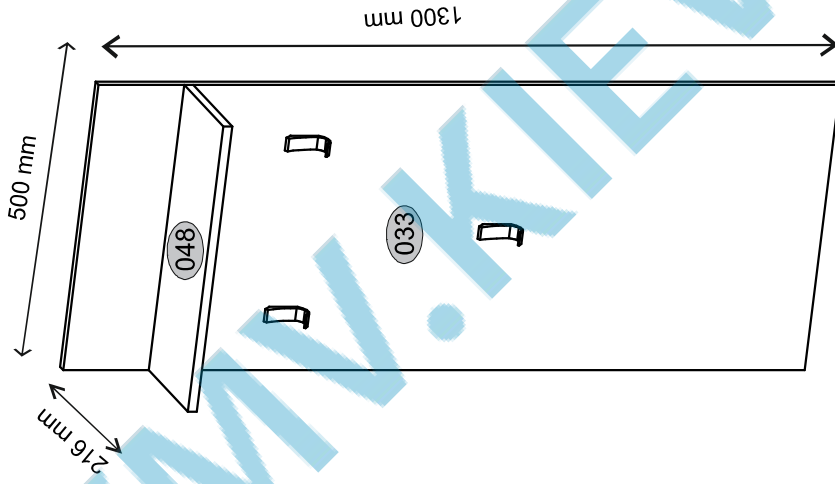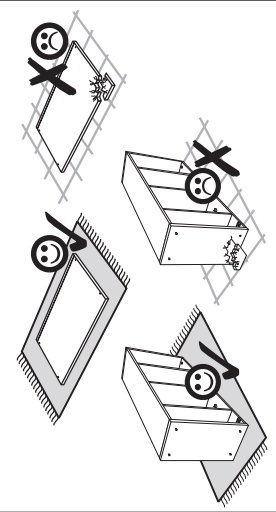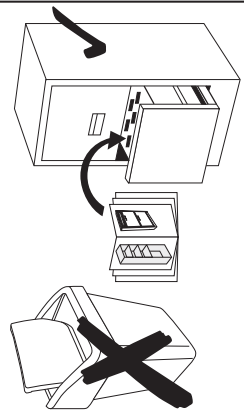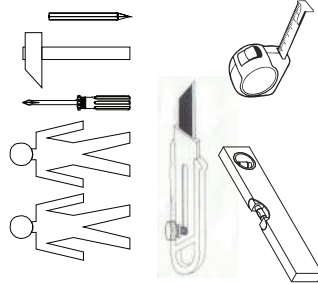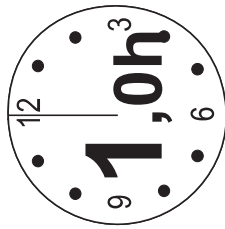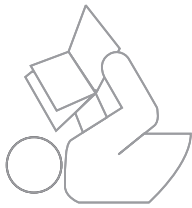


Code	Dimensions			Package
033	1300	500	16	1 / 3
048	500	200	16	1 / 3


2x ø6-3x13 mm e2	2x ø5x60 mm p17	2x ø8x30 mm f1	2x g2	4x ø9 mm e19
6x ø4x18 mm p18	3x ø10 mm f3	3x g101	3x s1	3x ø8-50 mm e1




1

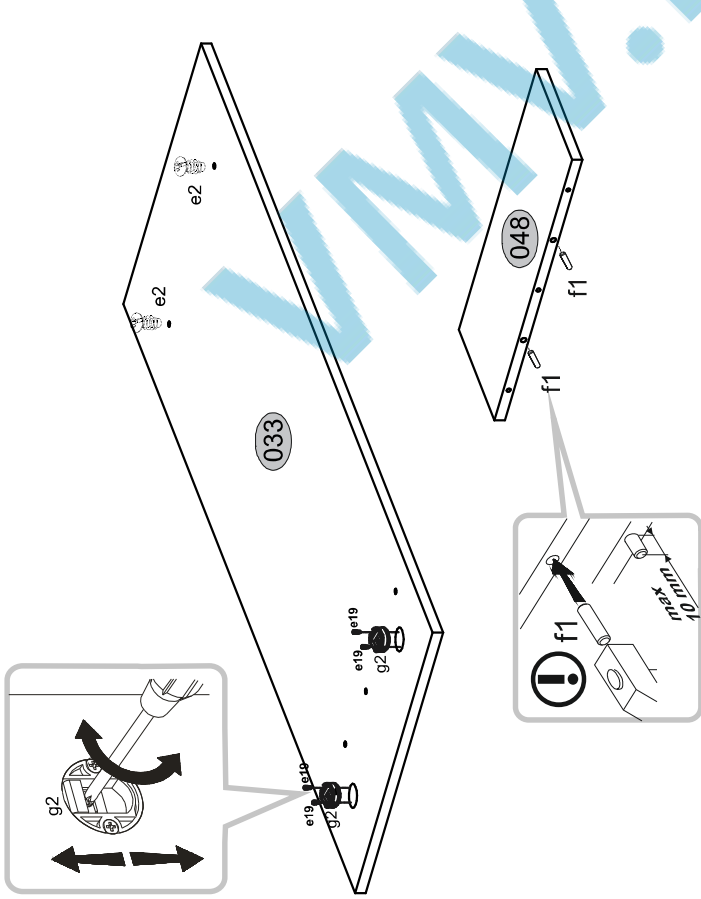

3

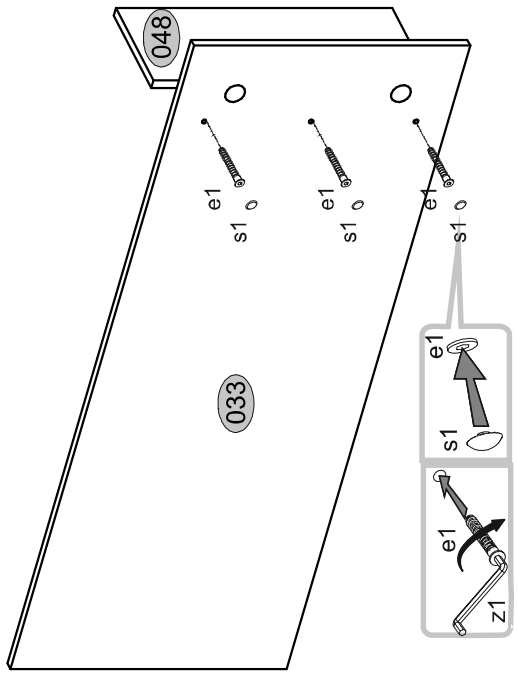

2

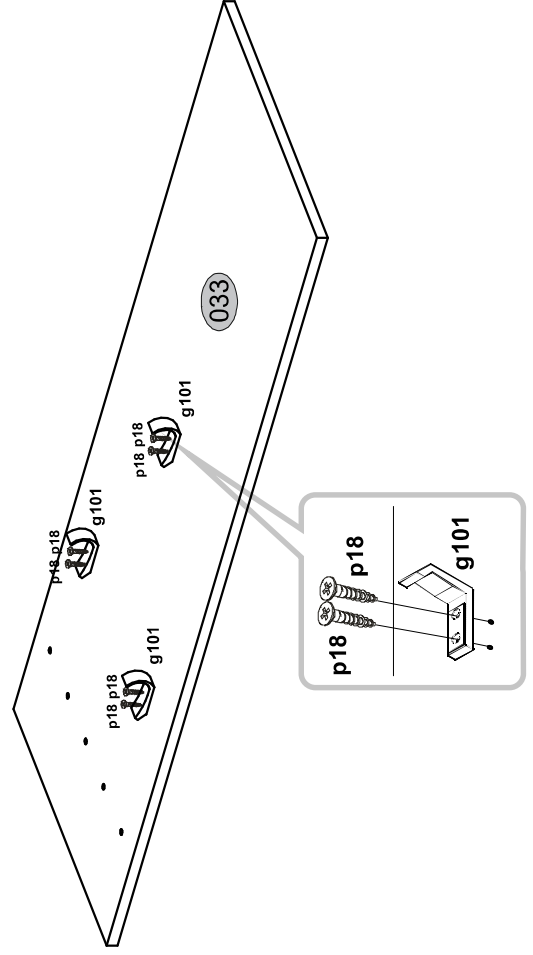

4

